 


PAUL RICH

#timewellspent

WATCH SETUP GUIDE AND WARRANTY

1.1 QUARTZ WATCH SETTINGS

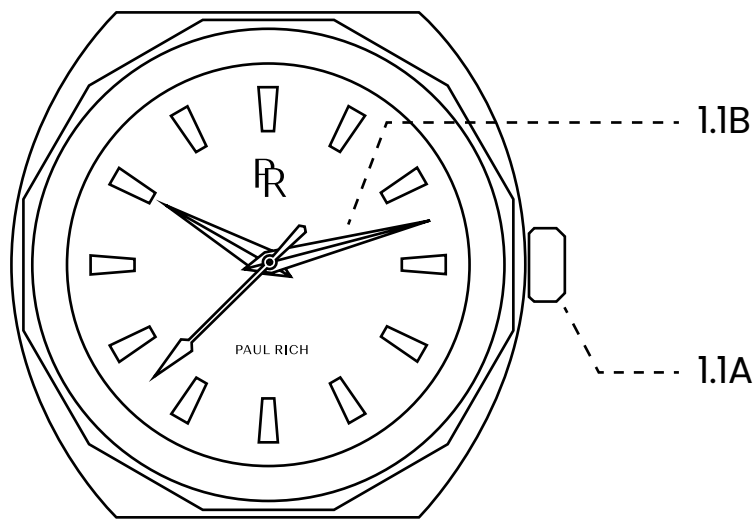

 
1.1A - Crown in original position.

1.1B - Minute and hour hands.

SET THE TIME

1. Pull the crown (1.1A) to unlock the hands. Listen for a soft click.
2. Turn the crown clockwise to rotate the hour and minute hands (1.1B) at your discretion.
3. Push the crown back (1.1A) to set the time

1.2 AUTOMATIC WATCH SETTINGS

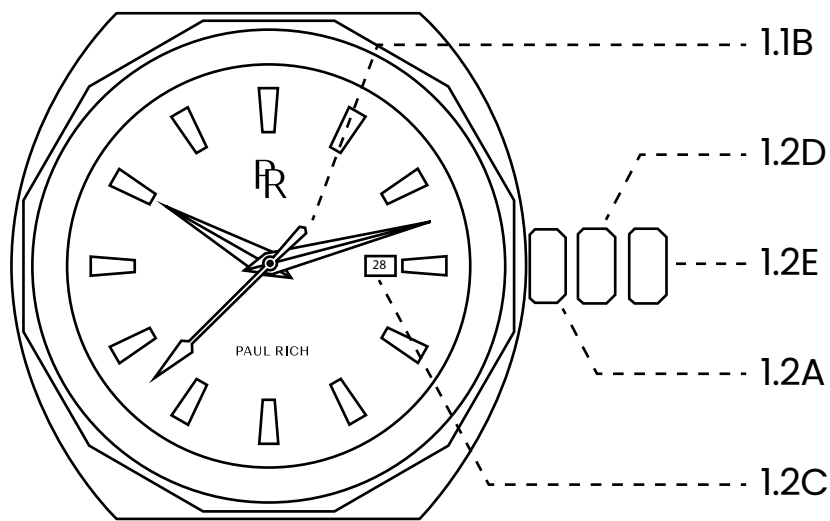

- 1.2A - Crown in original position.
- 1.2B - Minute and hour hands.
- 1.2C - Date wheel.
- 1.2D - Crown in first position - date setting.
- 1.2E - Crown in second position - time setting.

SET THE DATE

1. Pull the crown (1.2A) into the first position (1.2D). Listen for a soft click.
2. Turn the crown counter-clockwise to change the date on the date wheel (1.2C) at your discretion
3. Push the crown back to its original position to set the date.

If the time is set between 9:00 PM and 1:00AM, the date may not change the following day.

SET THE TIME

1. Pull the crown (1.2A) into the second position (1.2E). Listen for two consecutive soft clicks.
2. Turn the crown clockwise to rotate the hour and minute hands (1.2B) at your discretion
3. Push back the crown to its original position (1.2A) to set the time.

STOPWATCH FUNCTION

1. Press the Start Button (1.3F) to start the stopwatch. Press it again to stop.
2. Press the Stop Button (1.3G) to reset the chronograph sub-dials.

Once started, the stopwatch sub-dial will display time continuously 1:1 up to a maximum of 11 hours, 59 minutes and 59 seconds.

CHRONOGRAPH FACTORY RESET

After replacing the battery, please perform a factory reset as described below.

1. Pull the crown (1.3A) into the second position (1.3E). Listen for two consecutive soft clicks.
2. Press the Start (Upper) Button to advance the sub-dial's second hand. Press continuously until the sub-dial's second hand reaches zero position.
3. Push the crown back to its original position

5 ATM WATER RESISTANCE DISCLAIMER

5 ATM Water Resistance means this product can withstand pressures equivalent to a depth of 50m. This watch has not been designed for prolonged exposure to water. It may be suitable protection from splashes, rain or snow, showering, swimming, diving or snorkeling, however we advise you to preserve caution and do **NOT** expose the watch to any form of liquid. More guidelines on how to keep your watch safe include:

1. Do not expose your watch to water when the crown is not in its original position.
2. Do not pull out the crown to the first or second position when there is a risk of water exposure
3. Avoid placing the watch under a running faucet
4. Watch resistance is not permanent. Aging and mechanical damage may affect the longevity of water resistance. Make sure to check your watch regularly to ensure its water resistance.
5. Wipe off any form of liquid (e.g. moisture, sweat) with a soft dry cloth after removing the watch from your wrist to preserve the watch's water resistance.

WARRANTY CLAIM FORM

NAME:

DATE:

ORDER NO.

 
ADDRESS:

DEFECT DESCRIPTION:

For more information on warranty:

Please make sure you have read and understood the information on warranty in this Paul Rich Watch Setup Guide and Warranty card. For further information regarding repairs and returns, please contact the retailer where the watch has been purchased or contact Paul Rich Customer service via our website at paul-rich.com

2.1 QUARTZ WATCH SETTINGS

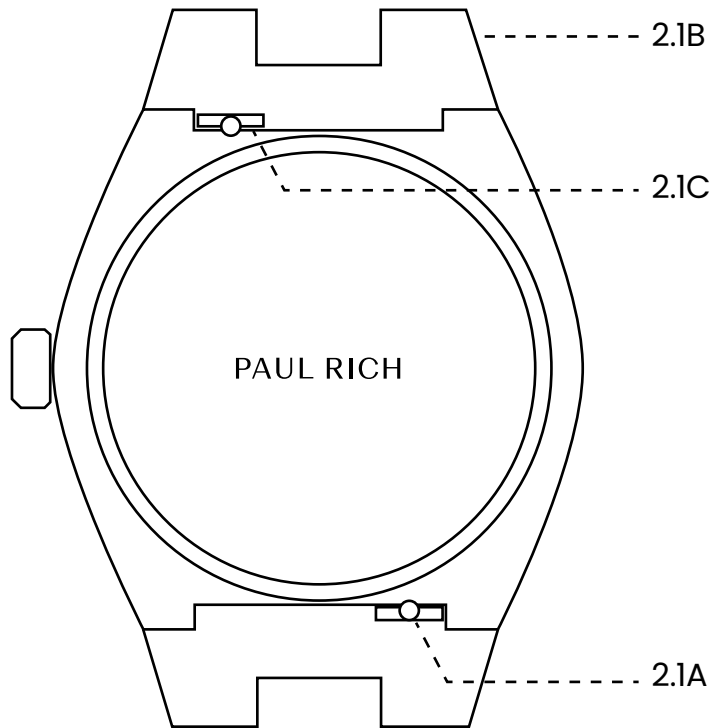

2.1A - Lever.

 
2.1B - Removable Link Screw.

2.1C - Clasp.

CHANGE YOUR WATCHBAND

1. Find the lever (2.1A) on the back of the watch, on the watchband near the lugs.
2. Pull or push the lever to the right and remove the watchband.
3. Pull or push the lever on the new watchband to the right
4. Insert the new watchband's end link into the watch and pull or push the lever to the left.

2.2 WATCHBAND ADJUSTMENT

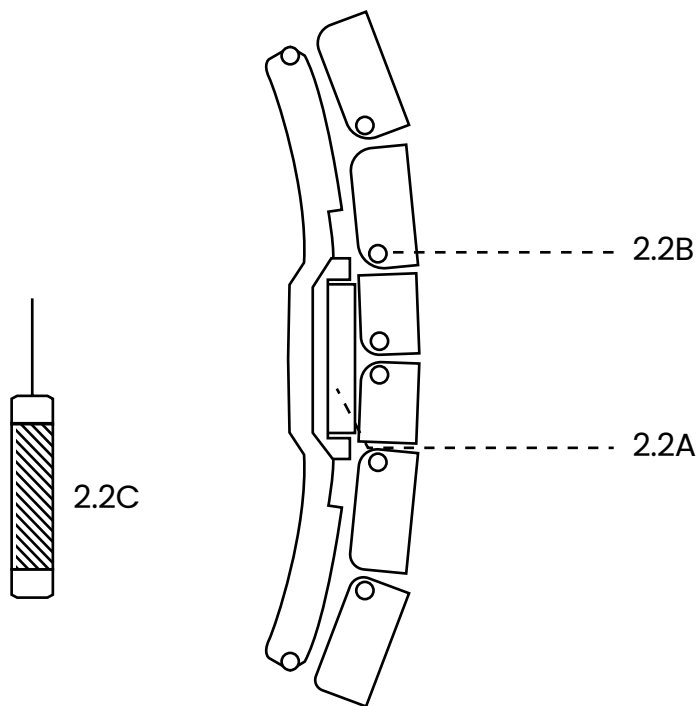

- 2.2A – Link.
2.2B – Removable link pin.
2.2C – Link pin removal tool.

SHORTEN OR LENGTHEN YOUR WATCHBAND

1. Push out the removable link pin (2.2B) from the link (2.2A) with the link pin removal tool (2.2C) which comes with every watch
2. Remove or add links at your will
3. If any links have been added, push in link pins in all added links while the links attach to each other.
4. If any links have been removed, push in a link pin inside the disconnected link while the links attach to each other.
5. Try on the watch and repeat the steps here if further adjusting is required.

DISCOVER PAUL RICH



Frosted Star Dust



Frosted Signature



Signature



Star Dust



Elements



Iced Star Dust



Cosmic



Limited Edition



Limited Rainbow Frosted
Star Dust

WARRANTY

1. Under this limited warranty, your watch's parts and workmanship are guaranteed under abnormal use for 24 months from the date of the reception. If you become aware of a defect in parts or workmanship during this time, Paul Rich Group LLC will, at its sole discretion, provide for the replacement of your watch in accordance with the terms herein. If your watch or any part original to your model is not available, a substitute of equal value may be provided for purposes of replacement.
2. To obtain a replacement of your watch under this warranty, please contact an authorized Paul Rich Group LLC retailer or service provider, who will provide additional instructions. If the watch was purchased in the Paul Rich Group LLC online store, or if you wish to obtain the contact information of authorized Paul Rich Group LLC retailers or service providers, please contact our Customer Service Department at help@paul-rich.com.
3. If you mail your watch for replacement, you must ensure it is packaged carefully to avoid any damage during shipping. Do not include any special watchbands or any other item of personal value in the shipment, as we cannot guarantee its return.
4. Although you will not be charged for replacement under this warranty, you may be required to cover the costs of packaging and mailing your watch to an authorized Paul Rich Group LLC retailer or service provider, as well as the costs of return shipping and handling. If it is determined that the warranty is void or does not apply, you may be charged for part or all of any replacement. If the battery in your watch is depleted at the time of replacement, you may be charged for a replacement battery.
5. If it is determined that the warranty is void or does not apply, you may be charged for part or all of any replacement. If the battery in your watch is depleted at the time of replacement, you may be charged for a replacement battery.
6. This limited warranty does not cover the following:
 - Batteries, straps, bands, bracelets, or crystals
 - Damage of any kind if there is evidence that the damage was caused by accident, improper use or mishandling of any part of the watch or any accessories, handling that is inconsistent with the instructions or guidelines included with your watch, lack of proper care or improper maintenance, tampering, abuse, wear and tear, or any factor other than a defect in the watch's parts or workmanship.
 - Theft
7. Damage resulting from repair, service, or alterations by anyone other than an authorized Paul Rich Group LLC retailer or service provider is not covered under this warranty and shall void the warranty.
8. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, ARE LIMITED TO 24 MONTHS FROM THE DATE OF PURCHASE.
9. PAUL RICH GROUP LLC IS NOT LIABLE FOR INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES.